

Parker Knoll

www.parkerknoll.co.uk

Parker Knoll Upholstery Ltd.
Castlewood Business Park, Farmwell Lane,
Sutton in Ashfield, Nottinghamshire NG17 1BX
Tel 01773 604 121 Fax 01773 540 084

A Sofa Brands International Company

Thank you for choosing

Parker
Knoll

No one cares more for your comfort

We would like to take the opportunity to thank you for selecting your furniture from the Parker Knoll collection and hope that you will be delighted with your new suite.

With a little care and a few tips from us, your furniture should last for years to come. This booklet contains all the information you need to ensure your furniture continues to look fabulous.

For over 150 years, Parker Knoll has been synonymous with a heritage of British craftsmanship, and a passion for comfort and style. This tradition continues today.





MADE IN
BRITAIN

25
year
frame guarantee

Parker
Knoll

Contents

■ Our Quality	4
■ General Information	8
■ Caring for your fabric upholstery	9
■ Caring for your leather upholstery	10
■ Cleanable Fabrics	12
■ Caring for your show wood and castors	13
■ Caring for your cushions	14
■ Fitting your Arm caps	16
■ General information: for your Motion Furniture	18
Motion Sofas & Chairs	21
Operating your Rise & Recline Chair	23
Using your Rise & Recline Chair	26
■ Heated Seats	32
■ USB / USBC operation and trouble-shooting	33
■ USB / USBC button variations	34
■ Review & Share your Furniture	35

Our quality

Parker Knoll furniture is handmade in Britain by the finest craftsmen and women. Every piece we make at our factory in Nottinghamshire is characterised by its quality, distinctive design and attention to detail. We are very proud of our unique heritage, and these values remain at the heart of our business. Today we carefully select high quality timber and fabrics to provide the ultimate in unparalleled comfort and durability.

Parker Knoll Upholstery is proud to have been awarded the BSI ISO 9001 QMS certificate. Our ISO 9001 Quality Management System at Parker Knoll is continually assessed demonstrating our commitment to continual improvement and customer satisfaction.

All Parker Knoll products are regularly subjected to independent testing to ensure safety, product performance, and reliability, always maintaining the highest possible standards for our customers.

The Parker Knoll Guarantee

With over 150 years' experience behind Parker Knoll, you can feel confident when choosing your sofa or chair. To support this, we provide you with a unique guarantee.

- All our furniture is supported by a 25 year frame and frame assembly guarantee.
- The 25 year guarantee applies to all wood and wooden components in your furniture.
- In addition, our recliner furniture is supported by a 5 year guarantee for motors and mechanism.

NB The 25 year guarantee applies to all integral legs. Legs and feet are covered for 1 year. Guarantee is only valid if product is purchased from an approved stockist.

25
year
frame guarantee

Approved Parker Knoll stockists can be found via the Find a Retailer page on our website.

<https://www.parkerknoll.co.uk/retailers/>

Fire retardancy

UK legislation includes fire and safety regulations for upholstered furniture. This legislation defines the standard to be met by both the filling materials and the covering fabrics. Two labels are attached to your furniture to show that it meets these requirements. These are:-

- 1 A swing-ticket.
- 2 A permanent label, usually attached to the underside of the seat.

Properly cared for and well maintained furniture should last for years.

Please take the time to register your purchase with us and validate your guarantee, either by completing the form at the back of this booklet, or registering online. In the unlikely event that you experience a problem with your furniture, please contact your original retailer where you purchased your furniture.

*beautifully designed and
expertly handcrafted*






General Information

A few simple tips:-

- 1 Your upholstery is designed to be used in a comfortable and ergonomically correct way. Sitting on the edges of cushions or on the arms may cause premature wear or distortion of the fillings or fabric.

Permanent damage may result from allowing people or animals to jump on the furniture.


- 2 Do not allow pets to snag the fabric. If a snag does occur do not pull it, carefully feed through to the back of the fabric with a blunt needle.
- 3 Please keep sharp edged objects, buckles and jewellery clear of the upholstery.
- 4 Do not allow children to use furniture to demonstrate their gymnastic ability.
- 5 Furniture should not be exposed to long periods of direct heat which could cause frame distortion or strong direct sunlight which can cause fading.
- 6 Avoid sitting on upholstery with non-colourfast clothes or heavily soiled clothes.
- 7 Do not leave newspapers on upholstery as this can stain.
- 8 When regularly using your sofa, it is advised to regularly turn and move loose cushions. Furniture with fixed seats will require dressing out with use. (see page 14 - cushion care)
- 9 Please make sure your sofa is kept in a well ventilated room. Upholstery fabrics have better longevity under normal humidity circumstances.

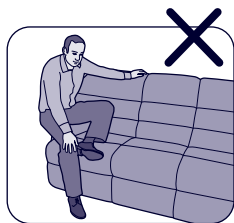

Do not sit on the arms or back of your sofa.



Do not move your sofa by pushing or pulling it by the arm pads.

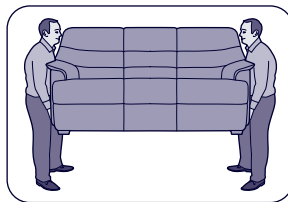

Your sofa should be moved by two people lifting from the base.

Caring for your fabric upholstery

Our extensive range of fabrics are selected from the finest mills across the world.

In order to maintain your furniture in the pristine condition in which it was delivered, please take a little time to read the following helpful tips.

- 1** Some fabrics have a pile, such as velvets and chenilles, which may shade, show pressure marks or flatten. Creases may form in seat and back cushions where fillings flex. These are normal characteristics of pile fabrics, and should not be regarded as a fault. (see page 8 - Special care for Velvet and Chenille upholstery)
- 2** Accumulated dust and dirt will accelerate wear and can dull colours. We recommend you carefully vacuum your upholstery, at least once a week to keep it in good condition.

Dust removal may be improved by pre-brushing with a soft brush.

- 3** Never use soap or detergents on fabrics, as upholstery fabrics are not 100% colourfast. Excessive wetting could cause shrinkage. Minor soiling can be removed by using a proprietary dry foam cleaner available from most furniture stores. Please test before applying to whole area and follow instructions for use.
- 4** The application of additional stain repellent treatments may affect the feel, colour and performance of the fabric.
- 5** It is advisable to have heavy soiling cleaned by a Professional Upholstery Cleaning Service.
- 6** Removable (loose) covers must be cleaned in accordance to the label attached to the cover. In most cases this will mean dry cleaning at a Professional Dry Cleaners only.

Parker Knoll will not accept responsibility for any damage caused through incorrect cleaning.

Special Care for Velvet and Chenille upholstery

Velvet and Chenille fabrics have a high pile as a result of a double weaving process. Consequently this pile may cause fabrics to shade, show pressure marks or flatten. These qualities are unavoidable and as such should not be regarded as a fault but instead a unique characteristic of these natural fabrics.

A few simple tips:-

- 1 Brush off any dust with a soft bristled hairbrush or cloth in the direction of the nap.
- 2 You can vacuum with a specific attachment for velvet or chenille to remove fuzz formed on the fabric.
- 3 Remove any creases with a steamer - holding the nozzle right up to the velvet moving at a moderate pace across the crease in the direction of the nap.
- 4 Never use soap or detergents on fabrics, as this can have a negative impact on the fabric and even change the colour appearance.
- 5 Please keep sharp edged objects, buckles and jewellery clear of the upholstery.

Caring for your leather upholstery

Our leather range offers a super soft feel with sumptuous colours – a stylish option for your Parker Knoll suite. Parker Knoll leathers are selected from premium tanneries worldwide, they are natural products and every hide has a unique life story. Leather will stretch and move, and may display traces of the past, such as healed scars, insect bites, growth marks, veins, sometimes even brand marks. These are all hallmarks of hide and in no way detract from wearing qualities of leather.

No two hides are alike, grain structure will always vary. The dyes and finishes penetrate to varying degrees in different areas of the hide to give an attractive finish. Whilst every attempt is made to achieve uniformity, this is not always possible as a suite requires at least eight hides, each with various textures therefore, perfect colour matching between individual pieces cannot be guaranteed. Swatch books should be regarded as a colour guide only.

Pull-up hides have an aged appearance, with a considerable degree of variation in colour texture and natural features. Modern tanning processes mean that our leather has a soft glove-like feel and will remain supple throughout its life. These factors mean that after a few weeks of use, wrinkles and creases will form naturally in the leather giving a 'puddling' effect. These are quite normal and should cause no concern, in fact they give a soft inviting look.

General care

A few simple tips:-

- 1** Leather furniture should not be exposed to long periods of strong direct sunlight, which can cause fading, drying out and cracking, neither should they be exposed to direct heat, which could cause frame distortion.
- 2** Sitting on the edges of cushions or on the arms may cause distortion and permanent damage.
- 3** Please keep sharp objects, buckles and jewellery clear, as these could tear the leather.
- 4** Do not allow pets to claw or climb on leather furniture.
- 5** Plump up all feather/fibre filled cushions on a daily basis, and foam filled cushions once a week. This will not only enhance the look of your furniture, but will prolong the life of the fillings. (see page 12 - Weekly cushion care)
- 6** Avoid sitting on leather with non-colourfast clothes or heavily soiled clothes.

Leather care

Whilst leather will provide many trouble free years of comfort, as with all natural products, a little extra care will help maintain its good looks.

- 1** Dust weekly with a clean soft cloth.
- 2** Clean quarterly by wiping over with a lukewarm mild solution of pure natural soaping agent, using a damp cloth or soft sponge in a circular motion. If using a sponge, work the sponge to achieve a lather; it is better to use the suds to clean with.
- 3** Do not rub the leather as this could damage the surface.
- 4** It is important not to over wet the cloth or sponge.

- 5 Failure to carry out regular cleaning could result in the leather becoming discoloured permanently.
- 6 Any accidental spills should be mopped up immediately with an absorbent tissue or a soft, clean cloth. Always work from the outside of the spill towards the centre, to prevent it spreading. This is important to avoid a stain. Then follow the 'soaping' cleaning procedure.
- 7 Never use:- polishes, creams, detergents, leather food, solvents, varnishes, white spirit or stain removers. They will damage the leather beyond repair.

We advise that in the event of severe soiling, you should consult your original retailer where you purchased your furniture.

Cleanable Fabrics

Easycare®

Feel free to live on your sofa with Easycare. This range of durable fabrics is resistant against almost all day-to-day household stains. Both eco-friendly and super soft, this collection is easy to clean with just a sponge, water and mild soap.

We have a range of Easycare fabrics in our current collection. These include Fusion, Latitude and Capture fabrics which can be found in the 'LifeStyle' swatch book in store, or on our fabric section of the website.

Easycare® and Easy Clean

Almost all average household, oil- and protein-based stains (e.g. olive-oil, red wine, coffee, tea, milk, fruit juice, jam...) can be removed by sponge cleaning using water and mild soap.

1- First, take off any excess residue from the spill immediately with a wet cloth or, if necessary, with abundant (lukewarm) water.

2- Then clean the stain with a sponge, water and eventually mild soap.

3- Allow to air dry.

aquaclean

aquaclean technology is an advanced fabric protector for upholstery of all kinds. It's a treatment that covers every fibre with an invisible molecular layer that prevents dirt from penetrating the fabric.

We have a wide range of beautiful aquaclean fabrics, which can be found on our website as well as aquaclean swatch book in store.

aquaclean technology helps to remove most household stains, in three simple steps:

- 1 - Remove any excess residue on the upholstery.
- 2 - Apply water over the stain, either directly or using a damp cloth. Wait a few seconds.
- 3 - Press down over the stain with a damp cloth and rub gently over the fabric in circular movements. If the stain does not come off completely, repeat the process as required.

Caring for your show wood and castors

Show wood

- 1 Timber or show wood areas of your furniture should be simply wiped with a soft duster.
- 2 Periodically they can be cleaned with a diluted solution of warm water and vinegar and then buffed with a soft duster to restore the shine.
- 3 Do not use spray furniture polish.

Castors

- 1 Some items are fitted with castors for ease of movement.
- 2 Check the condition of your castors and feet regularly, as if damaged or faulty they could dirty or damage wooden floors or carpets.
- 3 Avoid dragging furniture across exterior surfaces as this may damage your castors.

Caring for your Cushions

- 1 Reversible cushions, if provided, should be rotated daily on chairs and sofas in order to avoid localised excessive wear or soiling.
- 2 All scatter cushions should be plumped up on a daily basis especially if they are fibre or feather filled. This will not only enhance the look of your furniture but will help prolong its life.
- 3 We recommend that feather cushions or feather mix cushions are not vacuumed, only brushed.

Our visual guide overleaf will help you to ensure your upholstery is always at its best.

Encore seat interiors

The Parker Knoll Encore seat interior offers a solid foam core encased with pocketed roll carded fibre, giving the look and feel of a fibre seat with the added durability of foam.


- 1 With an Encore seat interior your seat cushion will recover its shape and maintain its plumpness.
- 2 Unlike standard fibre seat interiors, which need constant plumping and maintenance, the Encore seat interior only needs regular turning and dressing to maintain its shape.
- 3 On receipt of your sofa or chair you may see an exaggerated plumpness to the seat cushion. This will reduce with use over a short period of time as the interior pockets of fibre settle into the ideal shape

Premium Comfort Foam


Premium Comfort Foam has been developed by Parker Knoll in conjunction with a leading foam supplier to create a supremely comfortable seating experience. This seat interior option has a foam core and super soft topper, creating pockets of air when you sit as well as offering excellent recovery properties with an elegant, tailored appearance. Premium Comfort Foam will conform to your body shape, perfectly ensuring you have a premium comfort experience.

Weekly cushion care


Excluding Encore and Premium Comfort.

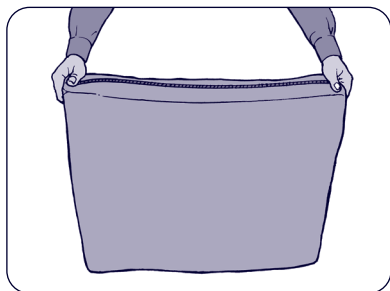


1 Hold the zip.

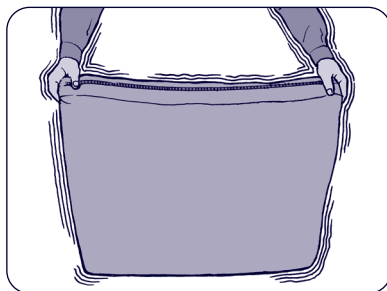

2 Shake vigorously.

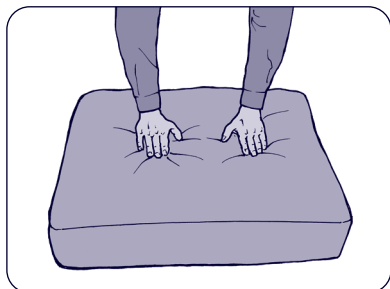

3 Plump the fibres.

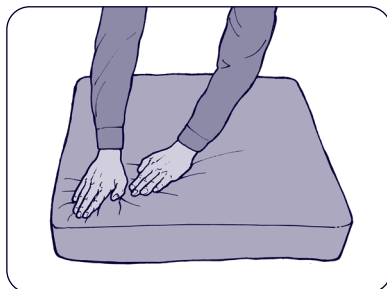

4 Work into corners.


Fitting your Arm Caps

Parker Knoll arm caps are tailored to fit, but as they are removable their appearance will differ from the fixed upholstery beneath.


Arm caps, if purchased with your suite, are usually supplied fitted to your furniture.

Not all Parker Knoll models are suitable for arm caps, please check with your retailer for availability.


Please note fabric for arm caps may not be cut to pattern match the furniture.

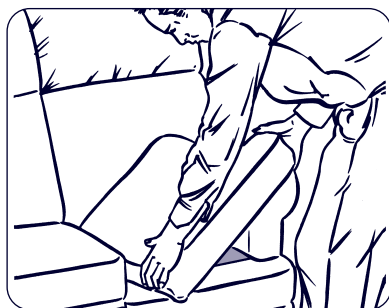


- 1** Remove the seat cushions from your sofa or armchair and carefully put to one side.

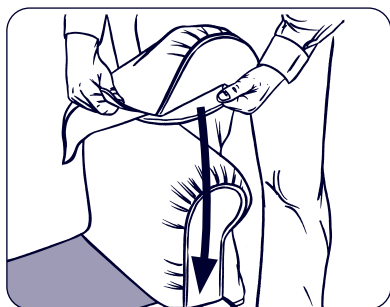

- 2** Select the appropriate arm cap and offer up to the arm of your chair or sofa. Please note that the arm caps are specially tailored for right and left hand facing arms.

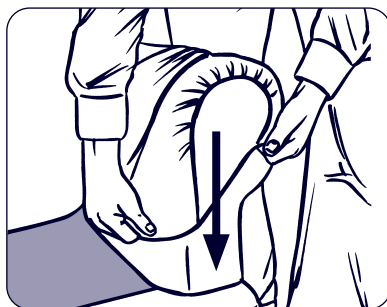

- 3** Place the arm cap over the arm and carefully pull into position, ensuring the arm cap fits snugly over the arm front and that the bottom of the arm cap is pulled down towards the seat platform.

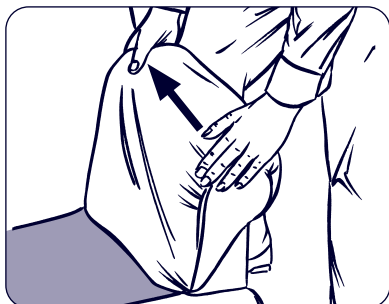


- 4** Place a hand over the front of the arm to secure the arm cap in position and pull the rear of the arm cap towards the back cushion of the sofa or chair.




- 5** Using both hands simultaneously, smooth the arm cap fabric backwards and diagonally down towards the corner of the back cushion and seat platform.



- 6** To ensure the arm cap fits snugly over the arm of the furniture, carefully grasp the fabric with both hands and pull backwards and downwards until taught.

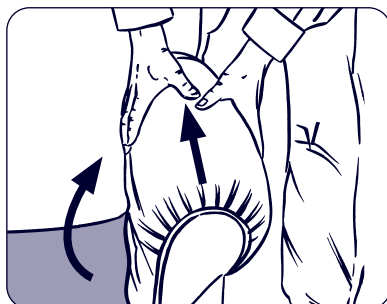

- 7** Repeat until a snug fit is achieved. Finally, tuck the back edge of the fabric between the arm and back cushion of the furniture.

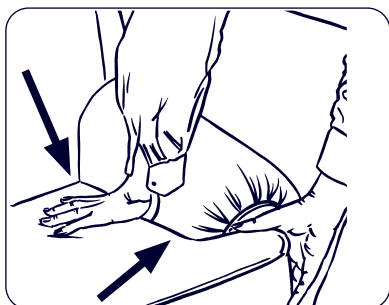

- 8** Carefully replace seat cushion ensuring a close fit between the arm cap and the cushion. Repeat procedure on the opposite arm.



- 9** The seat cushion will hold the arm caps in place, but please note that with regular use of furniture, the arm cap could move and the fitting process will need to be repeated as necessary.

General information:

for your motion furniture

Having positioned your chair/sofa

- Check that all leads from motors, transformers and plugs are secure.
- Check all mechanisms function correctly to full recline and upright position before sitting down.

Please note: body weight needs to be applied to Rise and Recline chairs once the chair has returned to standard seating position to allow it to fully close before moving to the next position.

- Remove wall plug when not in use.
- We recommend that you charge your cordless furniture every two to five days, overnight for eight hours to ensure the best usage.

Weight restrictions

- Our products have been designed to support a maximum weight of 140kgs.

Caution

- Do not place the chair/sofa, cables or transformer
 - Underneath or close to, any other object or piece of furniture.
 - In an area which is exposed to long periods of sunlight.
 - In or near an area which is, or may become, wet or damp.
 - Near open fires, heaters, gas or electrical appliances.
- Ensure children and pets are clear of the chair/sofa when it is being operated, and children are supervised whilst on or around the chair/sofa.
- Do not try to retrieve objects from the chair/sofa whilst in motion.
- Do not use the chair/sofa for lifting objects. The footrest should only support feet and legs.
- Do not swivel whilst reclined.
- Never dismantle the motor or transformer.
- Do not attempt to exit chair/sofa whilst in the reclined position, wait until the chair/sofa is fully closed.

- Do not tip the sofa bed forward, and ensure that the mechanism is securely fastened prior to moving the sofa bed.
- Do not operate the evolution two button power recliner or/and USB port if your hands are not completely dry

Please note: on models with a USB port, the output voltage is 5V with a maximum output current of 2A. Do not connect any devices that are outside of these specifications. Please refer to your device's user guide for further information.

It is possible that USB ports can warm up when they are in use, this is due to the charging device taking energy via the port, which is transferred into heat. This is a normal characteristic.

All USB ports in our furniture contain thermal protection devices which are designed to switch off when they reach a certain temperature, this is designed for thermal protection and is normal. If the USB does power down, leave it to cool then you can reconnect, the USB will automatically reset and will be ready for use.


In the event of a breakdown

- Your transformer is fitted with a battery back up, in case the main power supply fails. Over time the back up will need to be replaced with two 9 volt batteries.
- Check the chair/sofa is plugged in and switched on.
- Check that all leads are connected.
- Consult your original retailer from where you purchased your furniture for advice.




Motion sofas and chairs


Powered motion unit

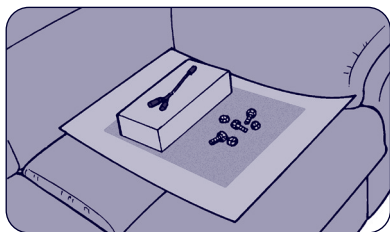


- 1** Your shrink wrapped transformer will be situated within the seating area.

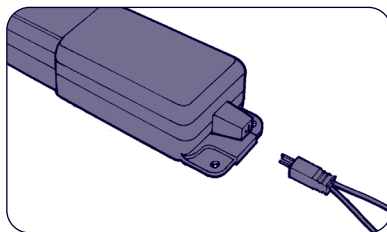


- 2** Insert your cable from the motor into the transformer. Plug the transformer into a nearby 240 volt electrical wall socket. A green DC light will illuminate indicating the power is on.

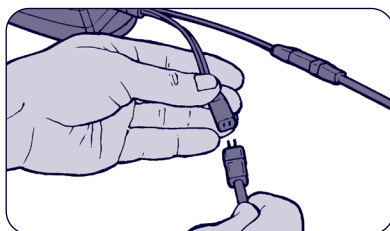


- 3** A sofa will have a 'twin lead' allowing one transformer to be used on a double recliner.

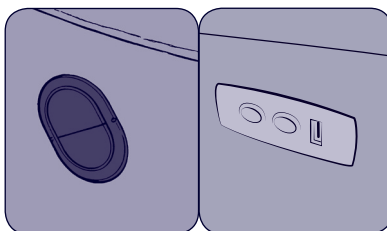

- 4** To activate your power recliner, simply press the button control on the outside of the arm.

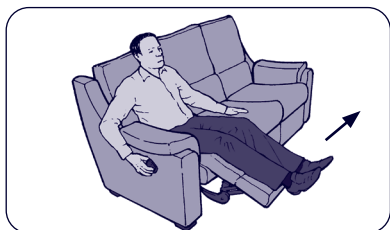

- 5** The front half of the button control will raise the kick board to the 'TV position'...

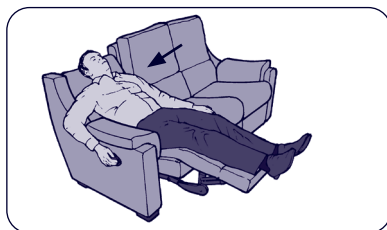

- 6** ...and finally through to the 'full recline' position. To return to the closed position simply press the back half of the button control.


Manual motion unit



- 1** To activate your manual recliner, position your body weight to the rear of the seat. Correct positioning of body weight will assist the opening function.




- 2** Release the footrest by using the 'latch lever' on the outside of the arm.

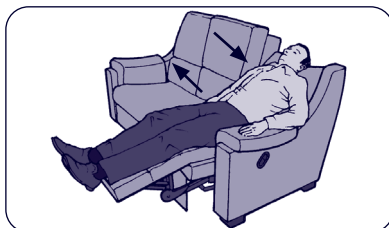


- 3** Once you have achieved the 'TV position', push your upper body weight backwards using the arm as leverage to gain the 'full recline' position.



- 4** To return to the closed position, bring your upper body forward and encourage return of the footrest by using your lower legs.

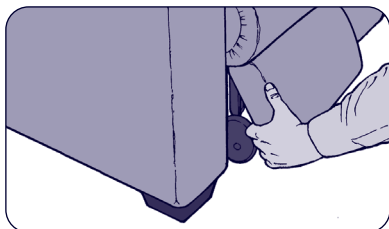


- 5** The footrest is spring loaded and will not lock in the closed position on a trapped object. Simply raise the footrest to release.

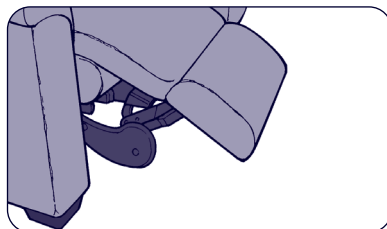


- 6** This product is fitted with finger shields on the footrest mechanism for your safety. These should not be removed.

Operating your Rise & Recline chair

Getting started

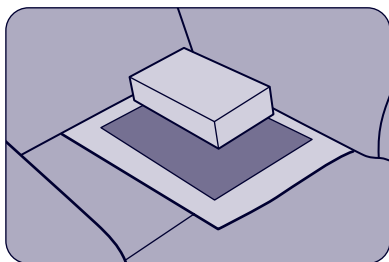

- 1 Your shrink wrapped transformer will be situated within the seating area.

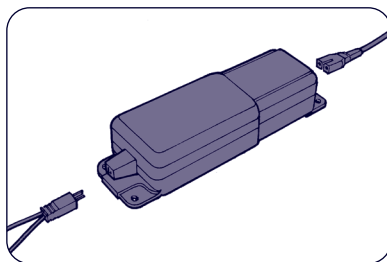


- 2 Insert the cable from the motor into the transformer. Plug the transformer into a nearby 240 volt electrical wall socket. A green DC light will illuminate indicating the power is on.



- 3 Your handset is located in a pocket situated on the side of the chair below the arm.

NOTE:

- The transformer has a battery back-up.
- Maximum weight 21 stone / 140kg.
- 5 year warranty on all motors.
- 25 year frame construction guarantee.

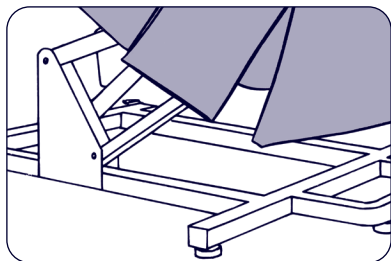


- 1** In the 'full rise' position, the chair's metal sub-frame sits securely on the floor with the front castors raised up for maximum stability.




- 2** Your chair can be fully raised for both easy exit or access. Simply walk away or follow step 3 to return to seated position.




- 3** To return your chair to the floor from either a standing or a seated position, press the RESET button on the handset.

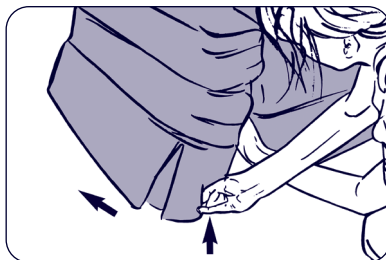

- 4** Some models are fitted with a spring-loaded footrest and will not lock in the closed position on a trapped object. Simply raise the footrest to release.

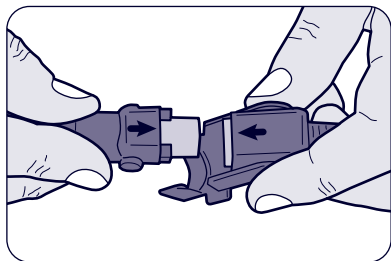

- 5** On some models the handset is equipped with a quick release connector to remove the handset from the chair. When reconnecting line up the arrows in the connector mouldings.

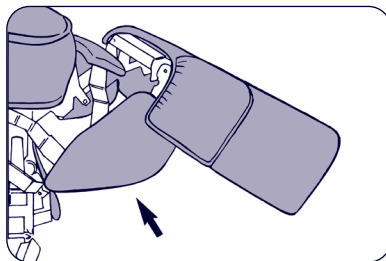

- 6** Some models are fitted with finger shields on the footrest mechanism for your safety. These should not be removed.

How to use your handset

The handset is ergonomically designed to fit in your left or right hand.


Dual Motor Operating

The Dual Motor feature enables the footrest and the back of your chair to operate independently.


* An additional safety feature has been applied. You cannot adjust the back rest position if in the raised mode. If you attempt to lower the back, the chair will return to ground position. This prevents the user accidentally slipping or falling from the chair.

Quick Release Handset

Quickly remove the handset and store away from children.

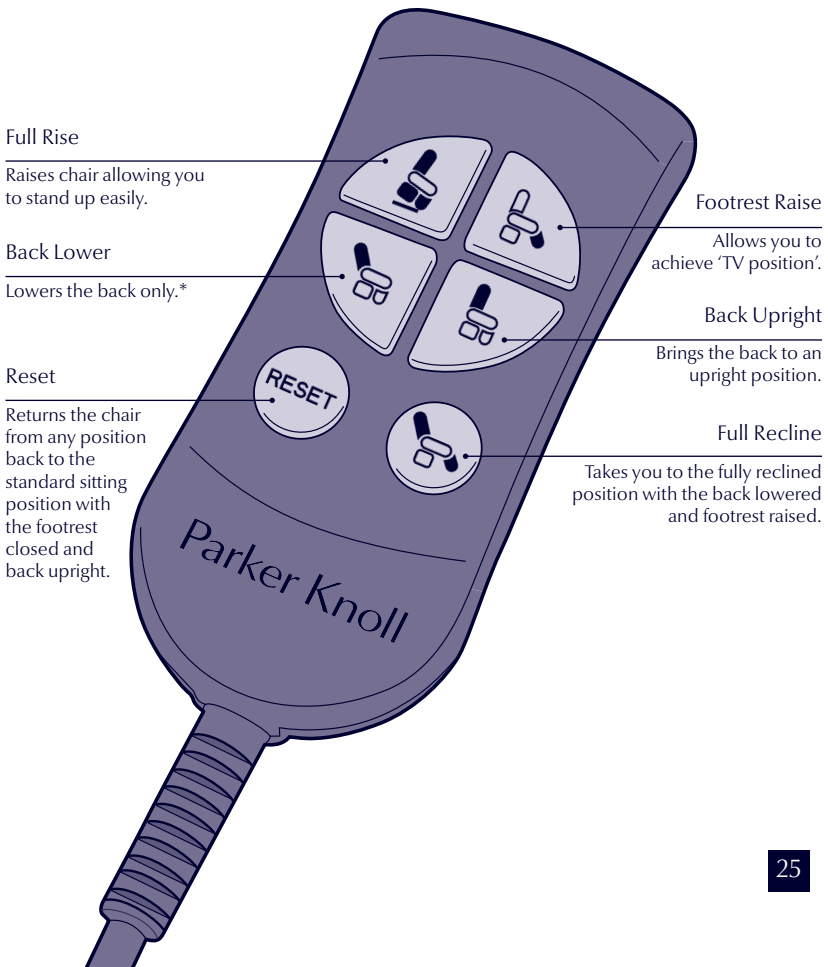


Using your Rise & Recline chair

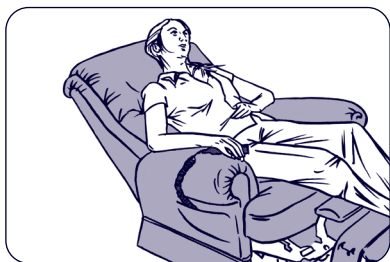

- 1** For the 'fully reclined position' press the green button on the handset.




- 2** To return the chair from any position to the normal seating position, press the red RESET button.

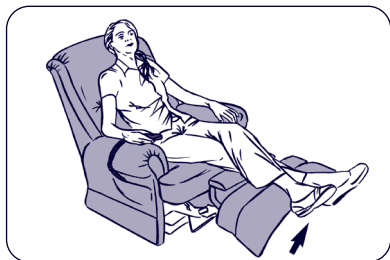

- 3** For the 'TV position' press the button on the handset to raise the footrest. The chair back will remain upright.



- 4** The rise operation must start with the chair in the closed position and the user seated comfortably and securely.

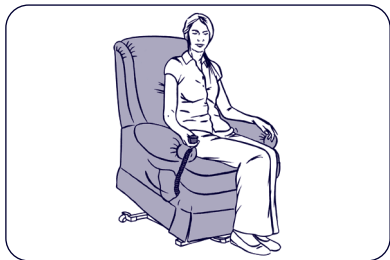

- 5** To achieve the 'full rise' position, press the button on the handset.



- 6** When the 'full rise' has been reached you can simply and easily exit the chair with the minimum of effort.



How to use your Norton Handset

The handset is ergonomically designed to fit in your left or right hand.


Three Motor System

The Three Motor feature enables the footrest, back of your chair and headrest to operate independently.


* An additional safety feature has been applied. You cannot adjust the back rest position if in the raised mode. This prevents the user accidentally slipping or falling from the chair.

Memory Function


The Norton model features memory functionality, allowing you to save and easily access your favourite positions. To set the memory function adjust the chair to your preferred position, to save this position press either the Memory 1 or the Memory 2 button 3 times to allocate the setting accordingly. The red LED will flash to confirm the position has been recorded. To reset either of these positions adjust the chair then repeat the memory process.

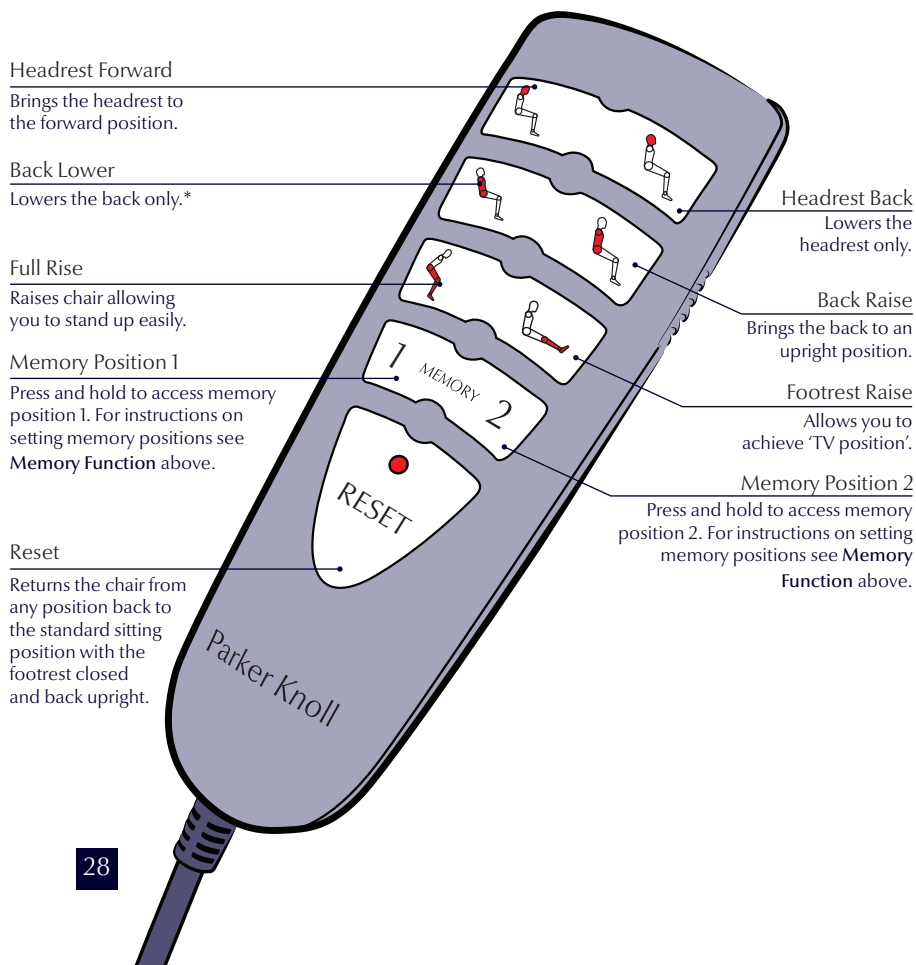


How to use your Norton Rise & Recline Chair

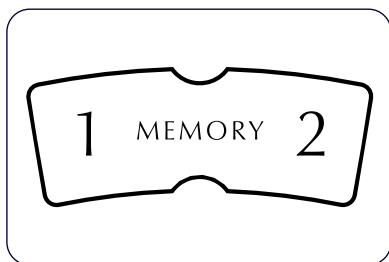


- 1** To access either of the saved memory positions press and hold one of the two memory buttons until the chair stops. For instructions on setting memory positions see **Memory function** on the previous page.

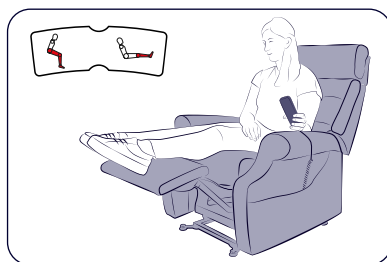


- 2** For the 'TV position' press the button on the handset to raise the footrest.

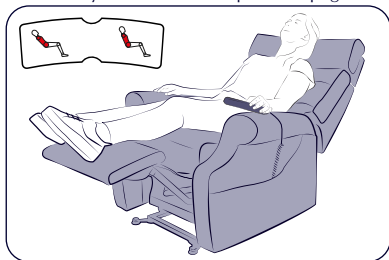


- 3** For the 'fully reclined position' press the back lower button on the handset.

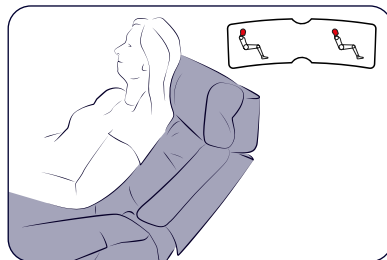

- 4** The headrest can also be adjusted forwards and backwards using the button on the handset.

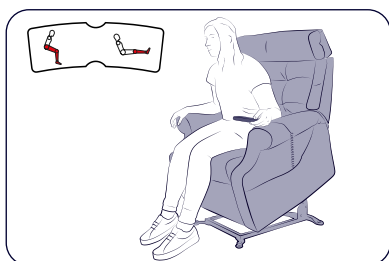


- 5** To achieve the 'full rise' position, first reset the chair to its normal seating position. Then press and hold the rise button on the handset. When the 'full rise' has been reached you can simply and easily exit the chair with the minimum of effort.

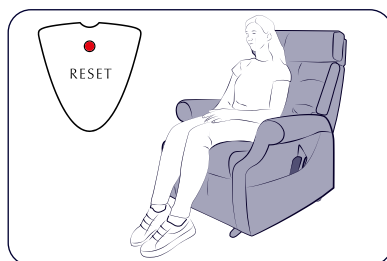

- 6** To return the chair from any position to the normal seating position, press the RESET button.

How to use your Miami and Daytona Controls

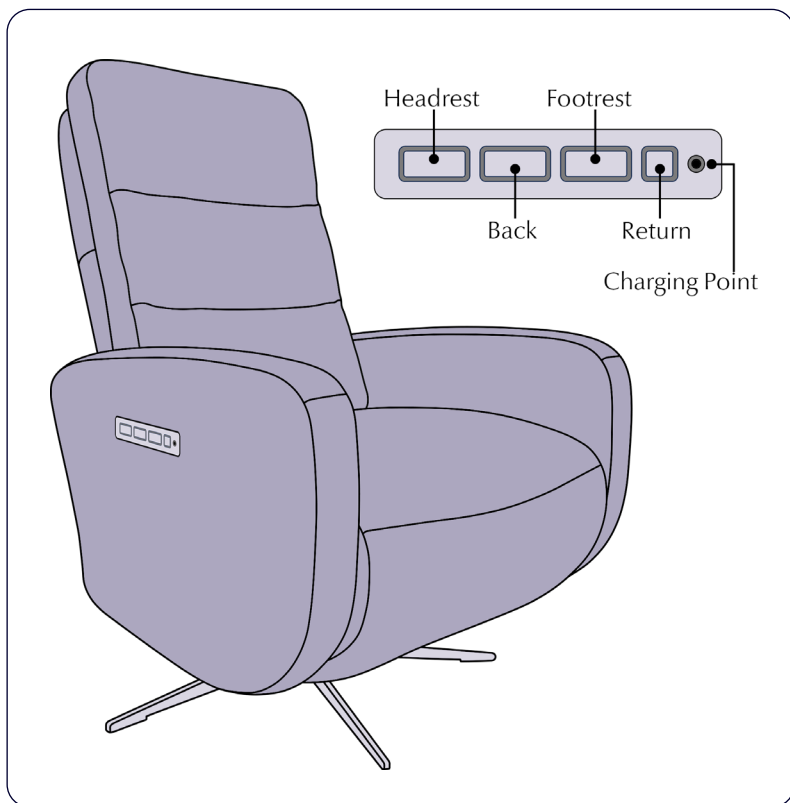

Control buttons are located on the outside of the arm of the chair. The control comprises of 4 buttons and a charging point located to the front of the panel.

Button Operation

3 Buttons control the desired positioning of your headrest, back and footrest. These are rocker switches to help achieve optimum positioning back and forth. The square button at the front of the 4 button configuration is a return to original position.

Charging Point

Simply plug in your power supply to charging point to charge up the integrated battery pack, removing before use.

*find your state of
ultimate relaxation...*





Heated Seats

For your convenience, certain models are fitted with built in Heated Seats.

At the touch of a button, our Heat Pads will run for a 60-minute cycle. The Heat Pad control button will turn red when active. With the temperature of the Heating Pad being monitored, the Heating Pad thermostat will stop the temperature from rising to an unsafe range and will keep the Heating Pad in a safe temperature range. To turn off the Heated Seat, press the control button once and the red light will turn off.

There are some sensible precautions that we would advise for all users of Heated products.

Care should be taken with sharp edged toys, buckles and jewellery as these could potentially pierce the Heat Pad.

DO NOT machine wash the Heat Pad (including immersion in water), if the Heat Pad becomes wet from a spillage, please ensure that the Heat Pad is disconnected immediately from the power supply. Please ensure Heat Pad is completely dry before reconnecting.

This appliance is not intended for use by children.

Children must not be left unsupervised or play with this product.

If the Heating functionality of this product ceases working, turn off the power supply and please contact your Retailer immediately.

Rechargeable Power Packs are not available on Sofas and Chairs with Heat.

All Heat Pads come with a 2-Year Manufacturing Guarantee.

Warning - Heating appliances should never be left unattended or overnight.

Warning - Should the Heating become uncomfortably hot, switch off at the mains and contact your Retailer immediately.

Warning - Ensure the product is disconnected before cleaning up spillages.



USB/USBC operation and trouble-shooting

For your convenience, certain models are fitted with built in USB/USBC power outlet ports, to be able to charge your devices whilst sitting in comfort. The USB/USBC power outlet is low voltage; 5.1 V/2.1 Amps/10 Watts and must only be used to charge IT or mobile equipment. Do not place any other objects or cables into the USB/USBC outlet.

When fitting a USB/USBC cable, if you are unable to plug in the connection head; rotate the head by 180° and try again. Should your device not charge, please check all connections including the condition of your personal charging cable.

If your USB/USBC power outlet port is part of an electric recliner toggle switch, ensure the seat reclines. If the seat reclines, power will be present at the outlet. Please test your cable on another USB/USBC power outlet.

Do not leave USB/USBC cables plugged in to the USB/USBC ports for long periods of time, to avoid over heating.

If there are any concerns over the functionality of the USB/USBC power

outlet, please contact your retailer.

It is possible that USB/USBC ports can warm up when they are in use, this is due to the charging device taking energy via the port, which is transferred into heat. This is a normal characteristic.

All USB/USBC ports in our furniture contain thermal protection devices which are designed to switch off when they reach a certain temperature, this is designed for thermal protection and is normal. If the USB/USBC does power down, leave it to cool and then you can reconnect, the USB/USBC will automatically reset and will be ready for use.

Ensure that all charging devices are kept on a hard surface and not on the upholstered product.

Never leave charging devices unattended, including overnight charging.

USB/ USBC Button Variations

Our power recliner furniture has two different variations - one with a USB port and one with a USB and a USBC port. The date of the order of your power recliner furniture will determine which of the variations you receive.



Power button with a USB port



Power button with a USB and USBC port

Register your purchase

We hope you will find this information helpful and by following these guidelines, your furniture should give you pleasure for years to come. In the unlikely event that you should experience a problem with your Parker Knoll furniture, please contact your retailer.

In the interests of improving quality, design and safety, Parker Knoll may alter specifications or discontinue models and fabrics without notice.

For further information and advice on Parker Knoll products, please contact your local retailer or visit our website at:
www.parkerknoll.co.uk

We are very proud of our unique heritage, and these values remain at the heart of our business. Our wealth of experience spans over three centuries, and over this time, as a brand, we have built up a wealth of knowledge and expertise.

To improve the satisfaction of our customers, we have partnered with the online review community, Trustpilot, to collect reviews.



Visit <https://uk.trustpilot.com/review/parkerknoll.co.uk> to share your experience.

We love to see our furniture in its new forever home. Follow our social media platforms and use #myparkerknoll for a chance to feature on our page.

